

## Product 513605



**513605 Active holder for fixed installation** With tilt swivel, with Molex adapter system. 2A charger. For both slim and extended battery. For device with TC55 Boot.

An active holder which is to be connected inside the dashboard, this gives a discreet, neat installation without cables hanging over the interior!

You can choose to use the holder as an active holder for charging of your device only, or to connect an adapter to the Molex connector for additional features. Then you can use the holder also for power supply of a GPS receiver or other own solutions (can not be used for data communication or audio connection).

12/24 Volt. The product is E-approved. Connect the power cable with a 2 A fuse. 2 A charger. Professional installation recommended. The holder is attached onto a tilt swivel so you can easily adjust your device in order to avoid light reflection. Attach onto a ProClip Mounting Platform.

### Important note!


If using the TC55 with the slim battery, you need to attach the distance plate onto the holder before using it. Otherwise the device won't fit properly.

EAN: 7320285136052

### Item no 513605 fits:

Motorola TC55 (For all countries)

## INSTALLATION INSTRUCTIONS

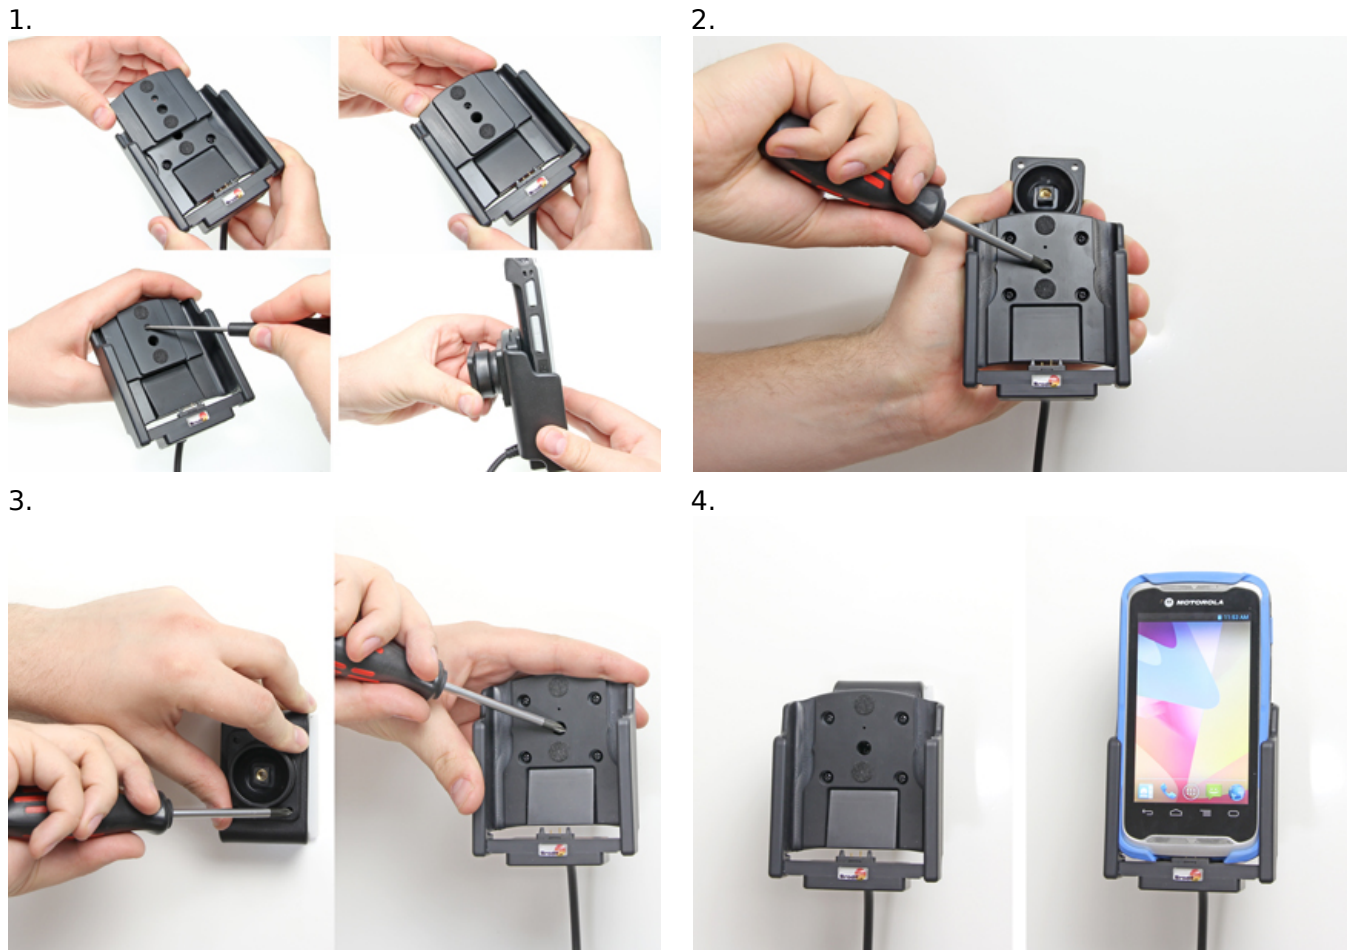

Please read all of the instructions and look at the pictures before attaching the holder. Important Note: Route the cable from the holder into the vehicle dashboard and route the power cable from the charger unit to the power supply source in the vehicle and connect as follows: 1. Connect the White wire to a Negative Ground connection of the vehicle or the vehicle chassis. 2. Connect the Red wire to a 12/24 Volt power supply in the vehicle that is controlled by the ignition switch of the vehicle.

1. If using your TC55 with the slim battery you first need to attach the distance plate. Slide the distance plate onto the back of the holder. Lock it into position using the enclosed screw.
  2. Loosen the screw in the center of the holder so you can remove the tilt swivel attaching plate on the back.
  3. Place the attaching plate onto the desired position. Screw the attaching plate into place with the enclosed screws. Place the holder over the attaching plate so the screw fits in the hole in the tilt swivel. Tighten the screw until the holder is firmly in place, but still can be adjusted.
  4. The holder is in place.
-